

800-80 Sheep Grip

Gripping width adjustment

1. Loosen nuts & bolts (A) but do not remove.
2. Remove R-clip (B).
3. Pull link arm out from connecting pin (C).
4. Repeat steps 1 to 3 on the other link arm.
5. Reposition connecting pin into desired hole in link arm.
6. Replace R-clip.
7. Tighten nuts & bolts.
8. Repeat steps 5 to 7 for other link arm.

